


Installing the Sequential Harnesses Into a 1996-2004 Ford Mustang

Thank you for purchasing the **WebElectric Products** Mustang Sequential Turn Signal Harnesses. This state of the art system, when installed properly, will provide you with years of trouble-free service.

There are three easy steps to this installation. The first is to remove the fixtures and harnesses. The second step is to install the new harnesses into the light fixtures and the third is to remount the fixtures onto the car. Follow the step-by-step instructions below and in no time, you will be driving a car that not only looks better, but is now safer because it is getting more attention by the drivers behind you.

Removing the Taillight Fixtures (the procedure below is used on both sides of the car)

- 1) (TIP: Protect the rear bumper with a shop rag.) Remove the plastic fasteners that hold the trunk liner. Pull the liner back to expose the nuts that hold the fixture in place. Using an 11mm socket, remove the four nuts that hold the fixture.
- 2) Using a small screwdriver, carefully release the connector retaining tab and disconnect the harness from the plug. Carefully work the harness grommet out of the car body. Remove the tail light fixture from the car and take it to a work bench.

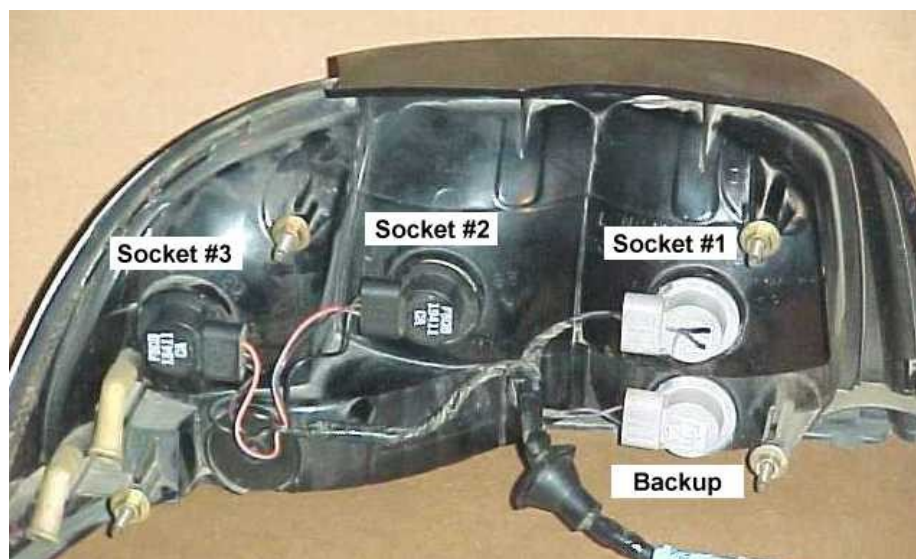

- 3) Remove the sockets from the tail light fixture using a counter-clockwise twist. Pull the light bulbs out of the sockets, and place the bulbs into the new harness. (NOTE: If your car is 3 years old or older, it might be a good idea to replace the bulbs while the fixtures are off the car.)

Installing the Taillight Fixtures (harnesses are identical -- they will fit either side)

- 4) Install the sockets of the new harness into the fixture, noting the number and position of the bulbs. Socket #1 is the inside socket, closest to the license plate. The #2 socket is the middle socket, and the #3 socket is the outside socket, furthest from the license plate. The socket labeled "B/U" is the backup lamp.
- 5) Insert the harness back into the car. ***PUSH*** the grommet into the hole – ***DO NOT PULL ON THE CABLE!*** The use of soapy water or dielectric grease will help seat the grommet. Re-connect the plug. Use one or two nuts to hold the fixture in place, start the car and put on the signal. Check to see that the lamps sequence from the inside of the car to the outside. Then remount the fixture. When re-mounting the fixtures into the car, **be careful not to pinch any of the wires on the frame or mounting studs.** This can cause a short that will destroy the harness!

Repeat the above steps for the other side of the car.

- 6) Find the Phone Cord and unwrap it. Connect one end to the mating connector on the left harness. Stretch the cord to the right side of the car, and connect the other end to the mating connector on the right harness.

